
Installation Manual

CHAIN LOOP ROLLER SHADE

Inside Mount • Jamb Mount • Outside Mount

CHAIN LOOP ROLLER SHADE

Read the instructions carefully before assembling and using the product.
Assembling process can be completed by non-professionals. For indoor use only.

⚠ WARNING



Window blind cord can STRANGLE your child.

To prevent strangulation, purchase cordless products or products with inaccessible cords.


⚠ ADVERTENCIA



La cuerda de la persiana puede ESTRANGULAR a su niño.

Para evitar el estrangulamiento, compre alternativas cuerda o productos con cuerdas inaccesibles.

⚠ MISE EN GARDE

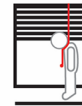

Votre enfant peut S'ÉTRANGLER avec un cordon de store.

Pour éviter la strangulation, achetez un produit sans cordon ou dont le cordon n'est pas accessible.

DO NOT OPEN WITH SHARP OBJECT – Remove Outer Wrap with Care

Top and Bottom Stops are Not Set at the Factory. See page 6.

WHAT YOU NEED

We recommend wearing Safety Glasses when installing your Roller Shades.



- Drill
- Drill Bits
- Screwdriver
- Measuring Tape
- Pencil
- Level
- Safety Glasses

CHAIN LOOP ROLLER SHADE


WHAT'S IN THE BOX

Depending on what you ordered, the fabric and the color of the hardware may be different.



- 1 Roller Shade
- 1 Tension Device attached to chain
- 2 Medium Base Brackets
- 2 Screw Cap Covers
- 2 Medium Bracket Covers
- 1 Adjustable Idler End (Part 1)
- 1 Adjustable Idler End (Part 2)
- 1 Allen Key
- 4 Screws
- 2 Bead Stops


Mounting Options

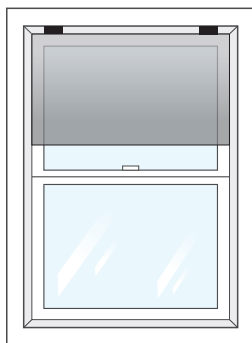

Inside Mount

With an inside mount the window treatment will be mounted and hung on the inside of the window frame.


An inside mount has a minimum depth requirement.*

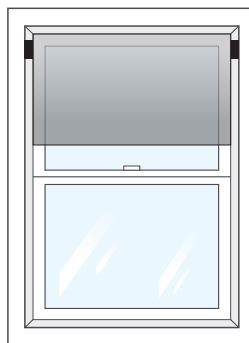

Jamb Mount

With a jamb mount the window treatment will be mounted into the vertical sides and hung on the inside of the window frame.

A jamb mount has a minimum depth requirement.*

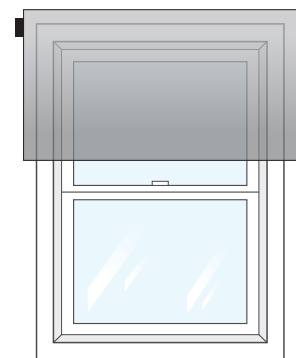

Outside Mount


With an outside mount the window treatment will be mounted and hung on the outside of the window frame.

An outside mount does **not** have a minimum depth requirement.

CHAIN LOOP ROLLER SHADE

We recommend reading through the instructions before installing your Roller Shades.


INSTALLING YOUR ROLLER SHADE

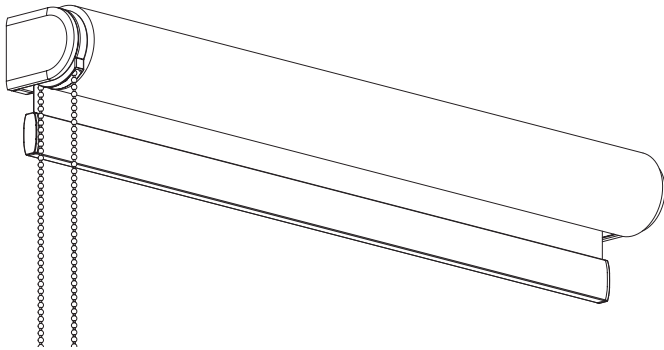

- Check your window before you install your Roller Shade. Brackets must be in line and level. The roller must be level to prevent fabric skewing.
- We recommend wearing Safety Glasses when installing your Roller Shade.
- We recommend wearing Work Gloves to keep your Roller Shade clean while installing it.


1. Assemble Brackets

- Attach Bracket Covers to Base Brackets by sliding them together.

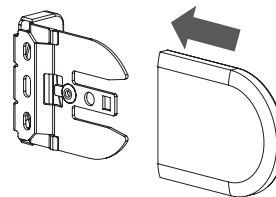


2. Mounting Your Brackets

- Place the assembled bracket against the window casing.
- Add Pencil Marks Where the two Screws Will Go.
- Pre-Drill the Two Holes.
- Install the Medium Base Bracket with the Bracket Cover attached.
- Remove the Bracket Cover.
- Repeat on the Other Side.
- Make Sure Your Medium Brackets are Level and in Line.

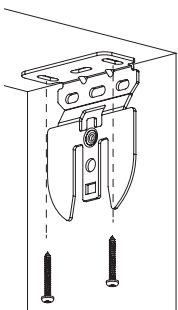


Mounting Brackets for INSIDE MOUNT

- For an Inside Mount the Brackets will be mounted on the inside of the window frame.

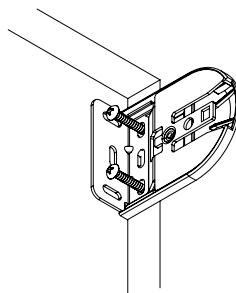

Mounting Brackets for JAMB MOUNT

- For a Jamb Mount the Brackets will be mounted into the vertical sides on the inside of the window frame.

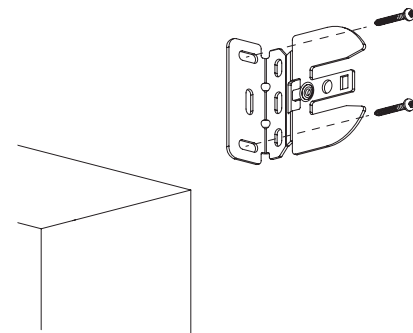


Mounting Brackets for OUTSIDE MOUNT

- For an Outside Mount the Brackets will be mounted on the outside of the window frame.

CHAIN LOOP ROLLER SHADE


3. Screw Cap Covers

- Attach the Screw Cap Covers on both sides.

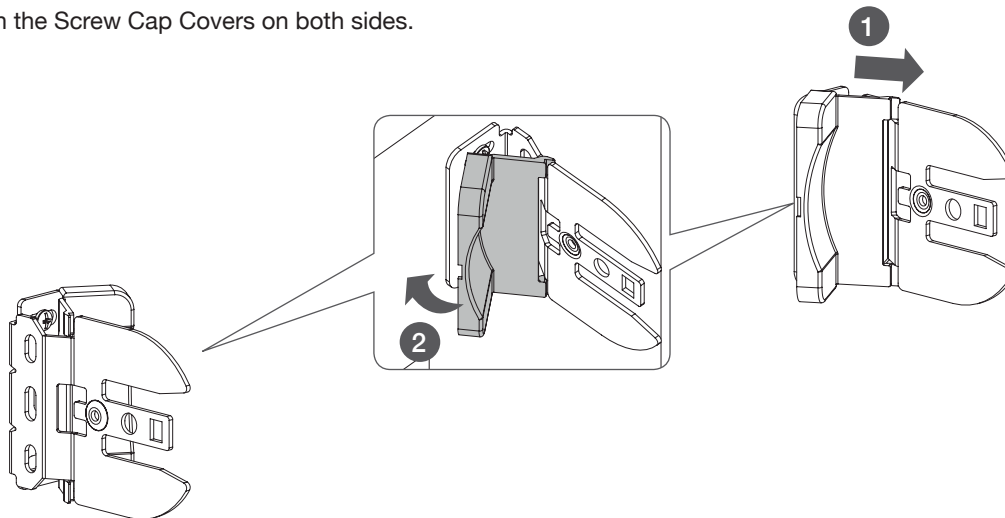

4. Adjustable Idler End Part 1 and Part 2


- Slide Part 1 of the Adjustable Idler End on the bracket that will be opposite of the bead chain mechanism.
- Make Sure That the “Metal” Arrow on the Back of Adjustable Idler End Part 1 is Pointing Up.
- Slide Part 2 of the Adjustable Idler End onto the same bracket.
- Make Sure the Arrows on the Front of the idler end are Pointing Up.

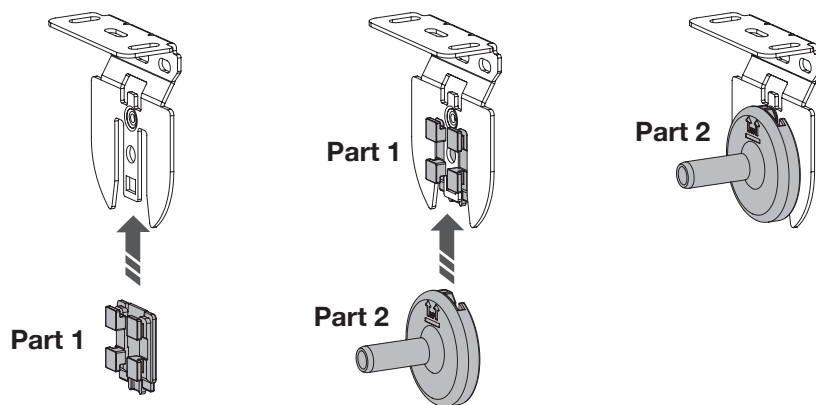


CHAIN LOOP ROLLER SHADE

5. Hang the Roller Shade

- Insert the Roller Shade Onto the Adjustable Idler End.

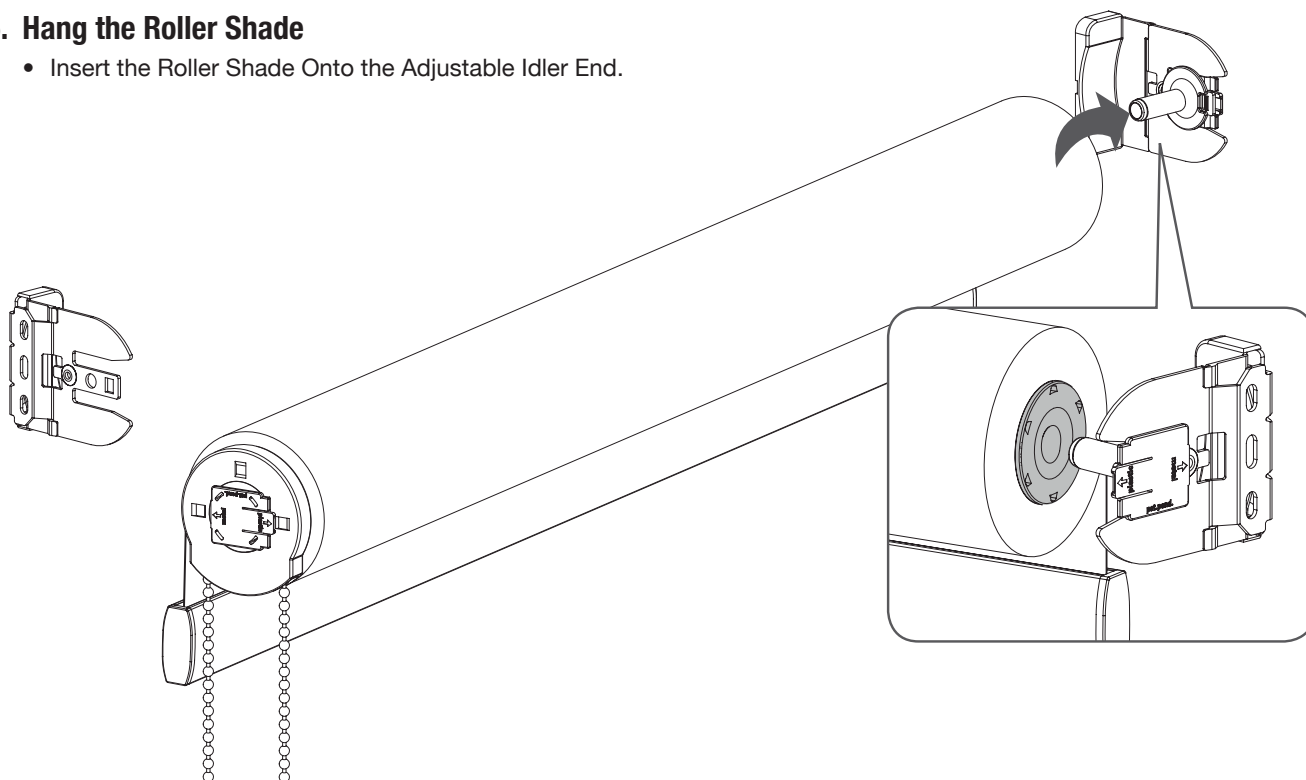

- Slide the Chain Loop side of the roller shade onto the Bracket.
- Make Sure the Roller Shade is Level.

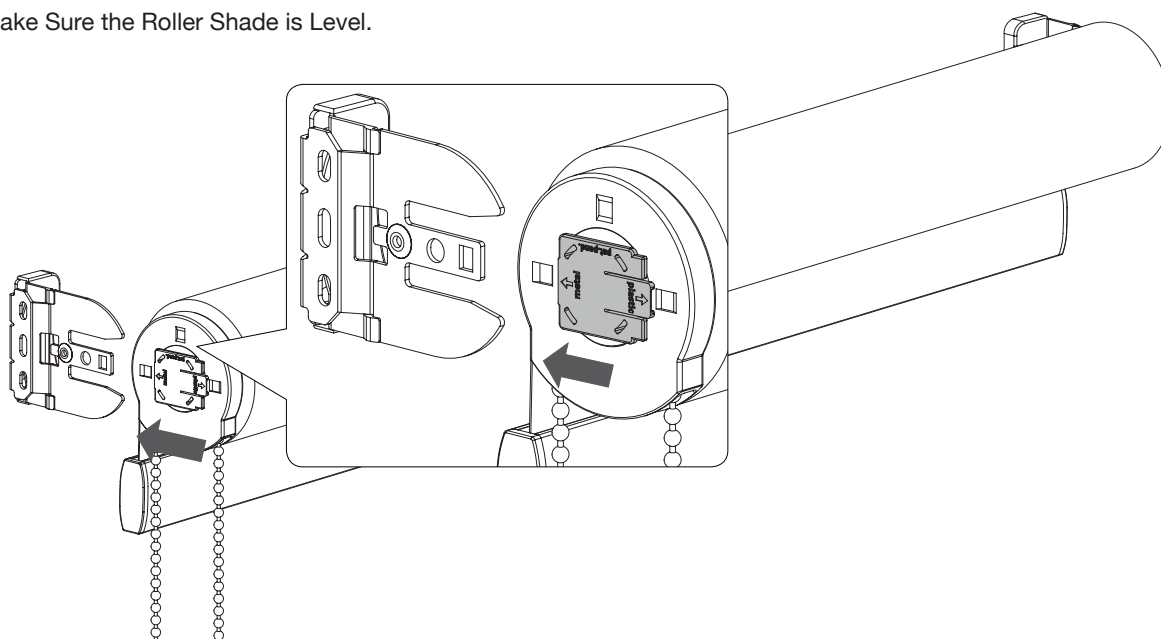


CHAIN LOOP ROLLER SHADE

6. Remove Paper

- Remove the Protective Paper from the Roller Shade.

7. Medium Bracket Covers

- Slide Medium Bracket Covers into place.

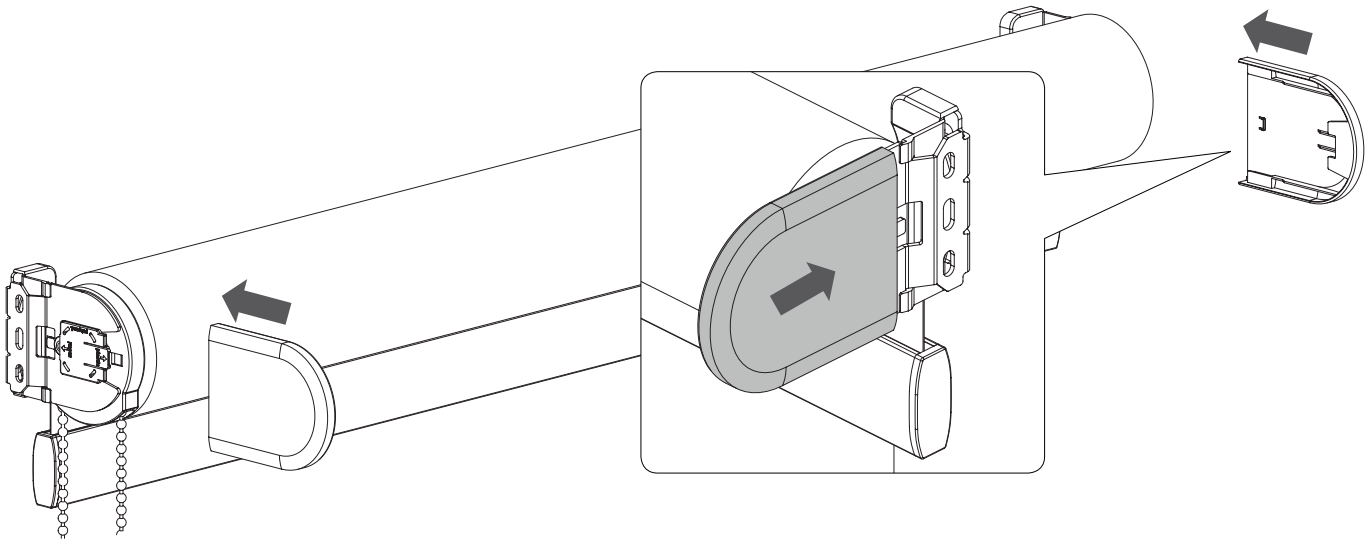


8. Bead Stops

A Bead Stop sets the Limits on a Chain Loop - Pliers required


8a. Set Top Stop

- Roll the shade up to the desired stopping point.
- Locate the bead closest to the clutch mechanism on the REAR part of the chain (closer to the window) and place the clear STOP BEAD two beads above this.

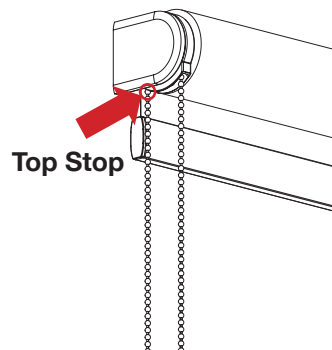

8b. Set Bottom Stop

- Pull the shade down to the desired lowered position.
- Locate the bead closest to the clutch mechanism on the FRONT part of the chain (closer to the room) and place the clear STOP BEAD two beads above this.

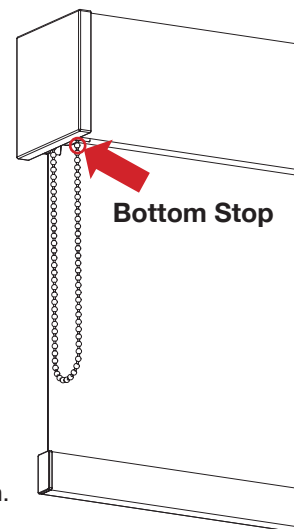

To remove a Bead Stop, use pliers to hold onto the back of the bead stop and pull off the chain.

CHAIN LOOP ROLLER SHADE

9. Install Tension Device

- Position the Tension Device where the Chain is taut.
- Add a pencil mark where the screw will go.
- Pre-drill the hole.
- Attach the Tension Device with a screw.

10. Operate the Roller Shade

After installing your tension device, pulling down on either the front or back bead chain will lower or raise your shade. This will vary based on left or right operation, or standard or reverse roll.